



Note: to unlock/unhide area/frequency you cannot do it from receiver, you must use Wisycom Manager Program on a PC connected with the receiver

	GROUP00	GROUP01	GROUP02	GROUP03	GROUP04	GROUP05	GROUP06	GROUP07	GROUP08	GROUP09
Flag										
Group Name	UNLOCK	250kHzLI	250kHzLI	200kHzLI	200kHzLI	NOT LI	GROUP06	GROUP07	GROUP08	GROUP09
Group Description	UNLOCK	20L mW equispaced 250kHz	20L mW equispaced 250kHz	20L mW equispaced 200kHz	20L mW equispaced 200kHz	power 20/50/100mW	Info on frequency Plan	Info on frequency Plan	Info on frequency Plan	Info on frequency Plan
CH00	941500	941500	941500	941500	941500	941500	941500	941500	941500	941500
CH01	941500	941500	952850	941500	952850	941575	941500	941500	941500	941500
CH02	941500	941750	953100	941700	953050	942000	941500	941500	941500	941500
CH03	941500	942000	953350	941900	953250	942250	941500	941500	941500	941500
CH04	941500	942250	953600	942100	953450	942600	941500	941500	941500	941500
CH05	941500	942500	953850	942300	953650	943100	941500	941500	941500	941500
CH06	941500	942750	954100	942500	953850	943850	941500	941500	941500	941500
CH07	941500	943000	954350	942700	954050	945200	941500	941500	941500	941500
CH08	941500	943250	954600	942900	954250	948000	941500	941500	941500	941500
CH09	941500	943500	954850	943100	954450	948925	941500	941500	941500	941500
CH10	941500	943750	955100	943300	954650	950350	941500	941500	941500	941500
CH11	941500	944000	955350	943500	954850	953225	941500	941500	941500	941500
CH12	941500	944250	955600	943700	955050	955000	941500	941500	941500	941500
CH13	941500	944500	955850	943900	955250	957175	941500	941500	941500	941500
CH14	941500	944750	956100	944100	955450	958850	941500	941500	941500	941500
CH15	941500	945000	956600	944300	955650	941500	941500	941500	941500	941500
CH16	941500	945250	956850	944500	955850	941500	941500	941500	941500	941500
CH17	941500	945500	957100	944700	956050	941500	941500	941500	941500	941500
CH18	941500	945750	957350	944900	956250	941500	941500	941500	941500	941500
CH19	941500	946000	957600	945100	956450	941500	941500	941500	941500	941500
CH20	941500	946250	957850	945300	956650	941500	941500	941500	941500	941500
CH21	941500	946500	958100	945500	956850	941500	941500	941500	941500	941500
CH22	941500	946750	958350	945700	957050	941500	941500	941500	941500	941500
CH23	941500	947000	958600	945900	957250	941500	941500	941500	941500	941500
CH24	941500	947250	958850	946100	957450	941500	941500	941500	941500	941500
CH25	941500	947500	959100	946300	957650	941500	941500	941500	941500	941500
CH26	941500	947750	959350	946500	957850	941500	941500	941500	941500	941500
CH27	941500	948000	959600	946700	958050	941500	941500	941500	941500	941500
CH28	941500	948250	959850	946900	958250	941500	941500	941500	941500	941500
CH29	941500	948500	941500	947100	958450	941500	941500	941500	941500	941500
CH30	941500	948750								



Wisyscom frequency table 40 groups of 60 channels (green = open, orange = lock, purple = hidden)

Title WISST114 - USA plan 940-960 MHz

Note: to unlock/unhide area/frequency you cannot do it from receiver, you must use Wisycom Manager Program on a PC connected with the receiver

Date 07/01/2019 @ 15.24.24

[illegible]

Note: to unlock/unhide area/frequency you cannot do it from receiver, you must use Wisycom Manager Program on a PC connected with the receiver

[illegible]



Note: to unlock/unhide area/frequency you cannot do it from receiver, you must use Wisycom Manager Program on a PC connected with the receiver

[illegible]